

LED 12x10W RGBW+UV Par Light

Item Number: LL1210P

USER MANUAL



This user manual includes important information for installation and operation. Please read this user manual carefully to install, operate, and maintain the lighting safely and correctly. A verified technician should do the installation and operation.

Please carefully check for any damages caused by transportation.

Before delivery, this device has passed strict quality control and inspection. Please follow the user manual for proper operation. If this fixture is damaged due to operation error or disregard of this manual, the fixture will be out of warranty, and the manufacturer or dealer will not be held responsible.

Installation:

Ensure the fixture is powered off before installation or maintenance. Keep the fixture at least 1.5ft. away from any combustible material, as it is not suitable for direct installation on these surfaces.

The applicable temperature for this fixture is between 25°F to 113°F. Do not use the fixture under or above this temperature range.

The truss used for hanging this fixture must be able to hold 10 times the weight of this fixture without deformation one hour after installation. Do not stand directly under the fixture while installing, uninstalling or adjusting the fixture.

We advise that an electrician confirms the safety of the electrical data prior to installation. Power off the fixture before installation or maintenance. Before operating, ensure that the voltage and frequency of power supply match the power requirements of the unit.

Rigging:

Fix the clamp on truss.

Pull the safety rope through the holes on the bottom of the base and fasten it on the truss or other fixing point.

MENU Key:

Press the *menu* key in its *normal* mode to enter *edit* mode. Press the key in *edit* mode again to return to the previous directory. After entering *edit* mode, if the button is not pressed for 30 seconds, the light will automatically exit the *edit* mode.

UP Key:

Press the *up* key to increase the address value. Hold down the key to quickly increase the address values. If the button is not pressed for 30 seconds, it will automatically exit the *flash status*. Pressing the key in *edit mode* will select the *function* menu in the current level directory from bottom to top (as shown in the table below).

DOWN Key:

Press the *down* key in normal mode to increase the address value. Hold down the key to quickly increase the address values. If the button is not pressed for 30 seconds, it will automatically exit the *flash status*. Pressing the key in *edit mode* will select the *function* menu in the current level directory from bottom to top (as shown in the table below).

ENTER Key:

Pressing the *enter* key in normal mode has no effect. Pressing this key in *edit* mode will enter the next level directory of the current menu function item. Please refer to the operations in each function menu for specific operations.

LED digit display menu instruction

NO	Display	Value	Function
1	d001	001- 512	DMX512 5DMX channel address setting
2	A001	001- 512	DMX512 9DMX channel address setting
3	r255	000 - 255	red dimmer from 0-100%
4	G255	000 - 255	green dimmer from 0-100%
5	b255	000 - 255	blue dimmer from 0-100%
6	u255	000 - 255	white dimmer from 0-100%
7	Y255	000 - 255	UV dimmer from 0-100%
8	FH99	01 - 99	strobe slow to fast
9	CL01	01-08	8 color effect
10	CC99	01 - 99	jump color change slow to fast
11	DE99	01 - 99	color fading slow to fast
12	CP99	01 - 99	pulse change slow to fast
13	SU01	01-09	sound activated

DMX 512 Channel

Channel		Value	Function
5CH	9CH		
	CH1	0-255	Master dimmer
CH1	CH2	0-255	Red dimmer
CH2	CH3	0-255	Green dimmer
CH3	CH4	0-255	Blue dimmer
CH4	CH5	0-255	White dimmer
CH5	CH6	0-255	UV dimmer
	CH7	0-255	Strobe slow to fast
	CH8	0-50	DMX dimmer
		51-100	8 color effect
		101-150	jump color change
		151-200	color fading
		201-250	pulse change

		251-255	sound activated
	CH9	0-255	speed slow to fast

Symbol Instruction on Fixture:



CE certificate



RoHS certificate