

LED 36x3W RGBW Par Light

Item Number: LL363P

USER MANUAL



This user manual includes important information for installation and operation. Please read this user manual carefully to install, operate, and maintain the lighting safely and correctly. A verified technician should do the installation and operation.

Please carefully check for any damages caused by transportation.

Before delivery, this device has passed strict quality control and inspection. Please follow the user manual for proper operation. If this fixture is damaged due to operation error or disregard of this manual, the fixture will be out of warranty, and the manufacturer or dealer will not be held responsible.

Installation:

Ensure the fixture is powered off before installation or maintenance. Keep the fixture at least 1.5ft. away from any combustible material, as it is not suitable for direct installation on these surfaces.

The applicable temperature for this fixture is between 25°F to 104°F. Do not use the fixture under or above this temperature range.

The truss used for hanging this fixture must be able to hold 10 times the weight of this fixture without deformation one hour after installation. Do not stand directly under the fixture while installing, uninstalling or adjusting the fixture.

We advise that an electrician confirms the safety of the electrical data prior to installation. Power off the fixture before installation or maintenance. Before operating, ensure that the voltage and frequency of power supply match the power requirements of the unit.

Rigging:

Fix the clamp on truss.

Pull the safety rope through the holes on the bottom of the base and fasten it on the truss or other fixing point.

MENU Key:

Press the *menu* key in its *normal* mode to enter *edit* mode. Press the key in *edit* mode again to return to the previous directory. After entering *edit* mode, if the button is not pressed for 30 seconds, the light will automatically exit the *edit* mode.

UP Key:

Press the *up* key to increase the address value. Hold down the key to quickly increase the address values. If the button is not pressed for 30 seconds, it will automatically exit the *flash status*. Pressing the key in *edit mode* will select the *function* menu in the current level directory from bottom to top (as shown in the table below).

DOWN Key:

Press the *down* key in normal mode to increase the address value. Hold down the key to quickly increase the address values. If the button is not pressed for 30 seconds, it will automatically exit the *flash status*. Pressing the key in *edit mode* will select the *function* menu in the current level directory from bottom to top (as shown in the table below).

ENTER Key:

Pressing the *enter* key in normal mode has no effect. Pressing this key in *edit* mode will enter the next level directory of the current menu function item. Please refer to the operations in each function menu for specific operations.

LED Display Functions:

Item	Display	Function
1	D001	Address code of Channel 4 (001-512) Key B or C to adjust
2	A001	Address code of Channel 8 (001-512) Key B or C to adjust
3	R255	W1 color adjusting, (000-255) Key B or C to adjust the color.
4	G255	W2 color adjusting, (000-255) Key B or C to adjust the color.
5	B255	W3 color adjusting, (000-255) Key B or C to adjust the color.
6	U255	W4 color adjusting, (000-255) Key B or C to adjust the color.
7	FH99	strobe: from slow to fast
8	CL01	AUTO from slow to fast
9	CC 99	Color Jump change, (01-99) Key B or C to adjust the speed.
10	DE 99	Colorful gradual change, (01-99) Key B or C to adjust the speed.
11	CP 99	Color pulse change, (01-99) Key B or C to adjust the speed.
12	SU01	Colorful sound control change

Product Specifications:

Voltage: AC110-220V 50-60HZ

Power: 200W

Light source: 3Wx36pcs(R G B W COLOR)

DMX Channels: 4.8. channel combination optional

Control model: auto, sound, DMX512, master-slave

DMX512 Channel description:

4 channel

Item	Display	Function
CH1	R dimmer	R dimmer : from dark to bright
CH2	G dimmer	G dimmer : from dark to bright
CH3	B dimmer	B dimmer : from dark to bright
CH4	W dimmer	W dimmer : from dark to bright

8 channel

Item	Display	Function
CH1	Dimmer	R,G,B,W dimmer : from dark to bright
CH2	R dimmer	R dimmer : from dark to bright
CH3	G dimmer	G dimmer : from dark to bright
CH4	B dimmer	B dimmer : from dark to bright
CH5	W dimmer	W dimmer : from dark to bright
CH6	Strobe	R.G.B.W. strobe: from slow to fast
CH7	Function choice	0—50 : DMX control ; 51—100 : hop change ; 101—150 : gradual change ; 151—200 : pulse change ; 201—255 : sound control
CH8	Function speed	Speed function, from slow to fast

Symbol Instruction on Fixture:



CE certificate



RoHS certificate